

# Extra Strong Bath Panel Installation Manual




MYLIFE®

THIS PRODUCT MUST BE INSTALLED BY A QUALIFIED PLUMBER

## IMPORTANT!

PLEASE REMOVE ALL PACKAGING AND THE PROTECTIVE FILM FROM THE BATH BEFORE INSTALLATION.

## INSTALLATION




X2\* X4\* X6\* X4\* X8\*


X3 X4+X2 X8

X4 X4 X2


Isolation liquid must be applied on the floor before fitting.


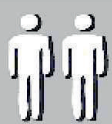


### REC PANELS

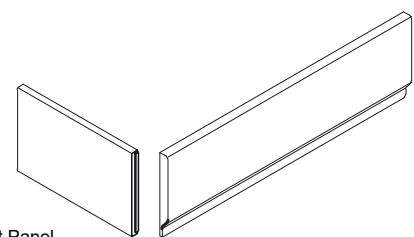


(\*) Items delivered with Tub  
(-) Items delivered with Front Panel  
( ) Items delivered with side Panel

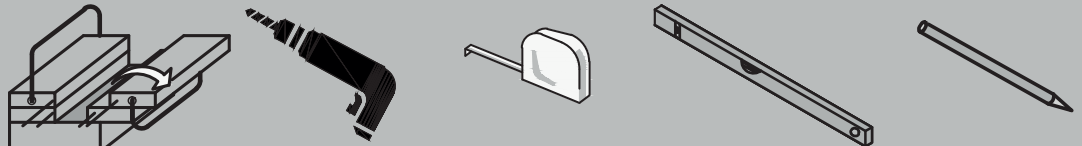





**1**

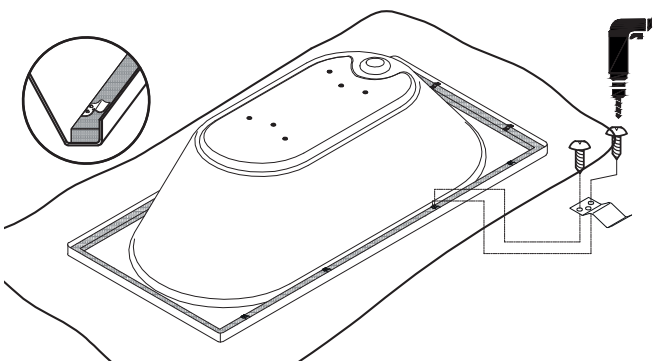

Attach the panel clips to the bath.  
Carry out this task before you begin installing the bath.

**2**

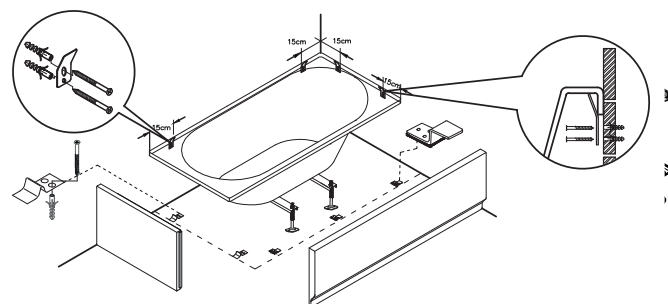

After step 5 of the bath installation instructions, affix the panel to the bath using the clips provided. Then carry out step 6, ensuring you also silicone around the bath panel.

# Extra Strong Bath Panel Installation Manual



## CLEANING AND MAINTENANCE

Your new bath should provide many years service if you follow these guidelines:

- Always run some cold water into the bath before turning on the hot tap.
- For best results, clean the bath whilst draining and still warm with a non abrasive cleaner, then wipe dry with a soft cloth. Any build up of grime over a period of time can be removed with a soft cloth and car restoring/metal polishing.

**ANY CONTACT WITH SOLVENTS SHOULD BE AVOIDED** such as paint strippers, peroxide etc. If by accident this does happen, dilute with hot soapy water immediately and dry the surface.

## AFTER SALES & TECHNICAL SUPPORT

Our highly experienced after sales and technical support team are always on hand to help should you require technical advise or a spare part.

T: +44 (0)28 3025 9988 | E: [technical@mylifebathrooms.com](mailto:technical@mylifebathrooms.com)