Emmi Flipper Panel
Installation Instructions

THIS PRODUCT MUST BE INSTALLED BY A LICENSED PLUMBER / JOINER

MYLIFE®

Manufactured to: BS EN14428

CE UK CA

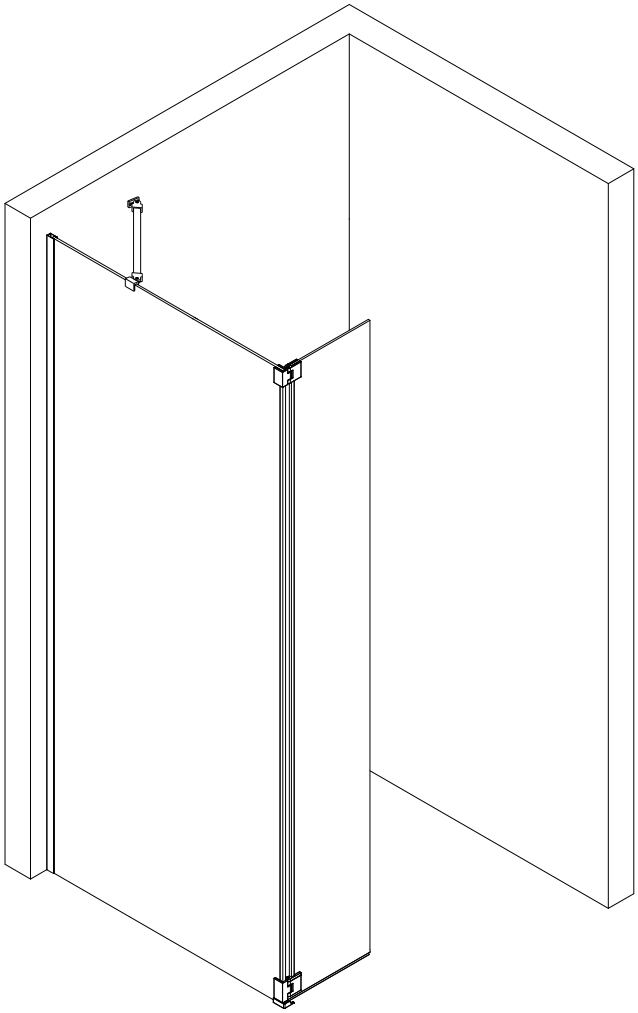

LH

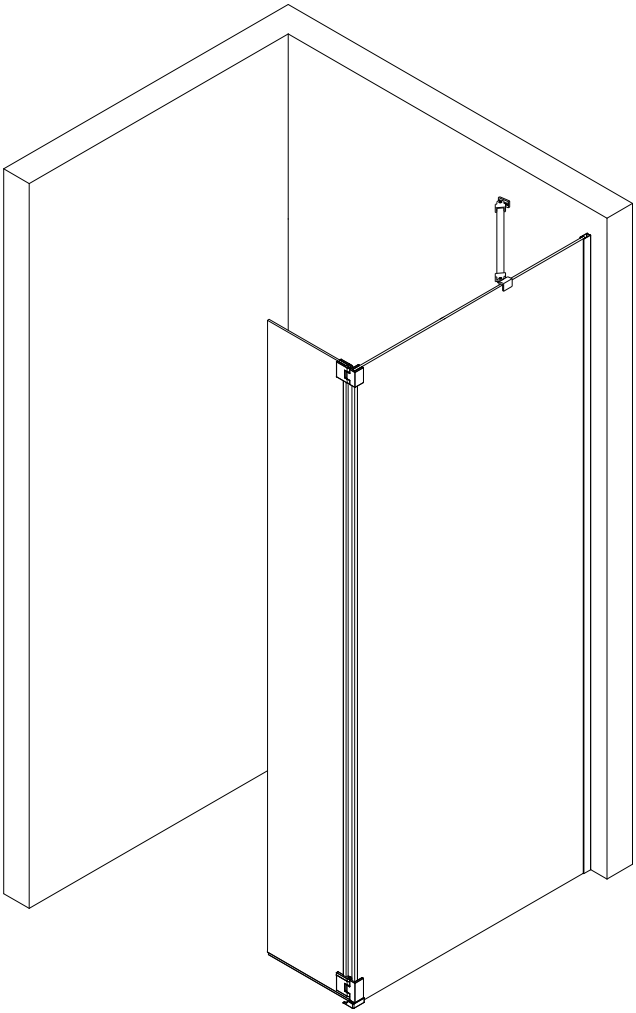

RH

TOOLS REQUIRED

DESCRIPTION	PART IMAGE
Tape measure	
Spirit level	
Pencil	
Ø6mm Drill bit	
Ø3mm Drill bit	

DESCRIPTION	PART IMAGE
Drill	
Flat-head Screwdriver	
Cross head Screwdriver	
Mallet	
Silicone Sealant	

⚠ This product is heavy and may require two people to install.

ASSEMBLY INSTRUCTIONS - DRAWING

NB: ALL MEASUREMENTS + COMPONENT SIZES QUOTED ARE IN MM.

Flipper Panel Hinge 180° (EMWFPHCP) (EMWFPHBL) (EMWFPHBB) (EMWFPHGM)

C

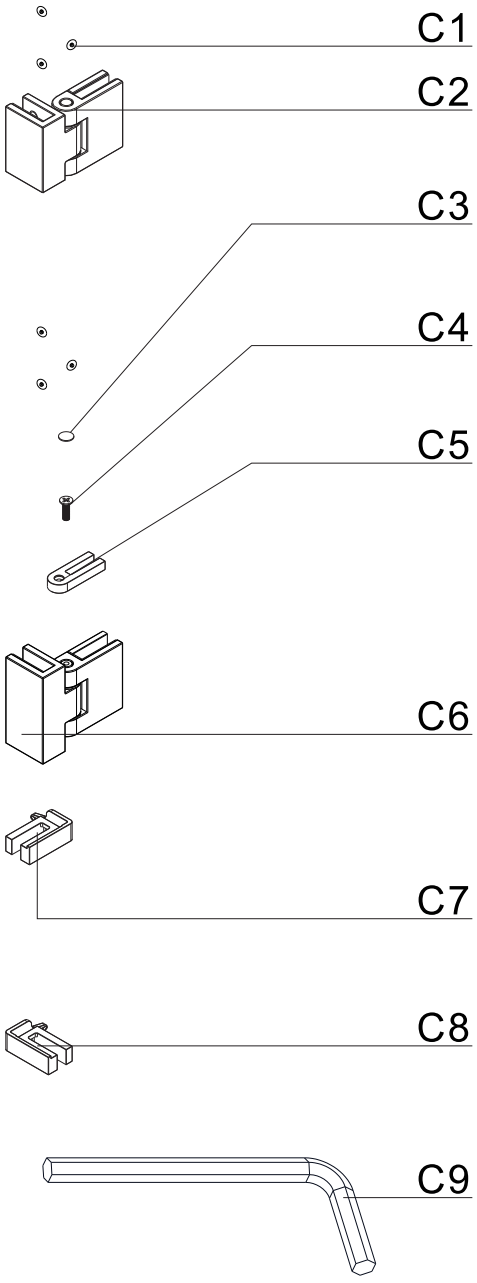

(C1) 6x Screw Covers

(C2) 1x Hinge Top

(C3) 1x Screw Cover

(C4) 1x Screw M4x14

(C5) 1x Glass Clip

(C6) 1x Hinge Bottom

(C7) 1x Bottom Guide Block L

(C8) 1x Bottom Guide Block R

(C9) 1x Hex Socket Wrench 4.0mm

ASSEMBLY INSTRUCTIONS - DRAWING

NB: ALL MEASUREMENTS + COMPONENT SIZES QUOTED ARE IN MM.

Flipper Panel With Seal (EMWFG30)

D

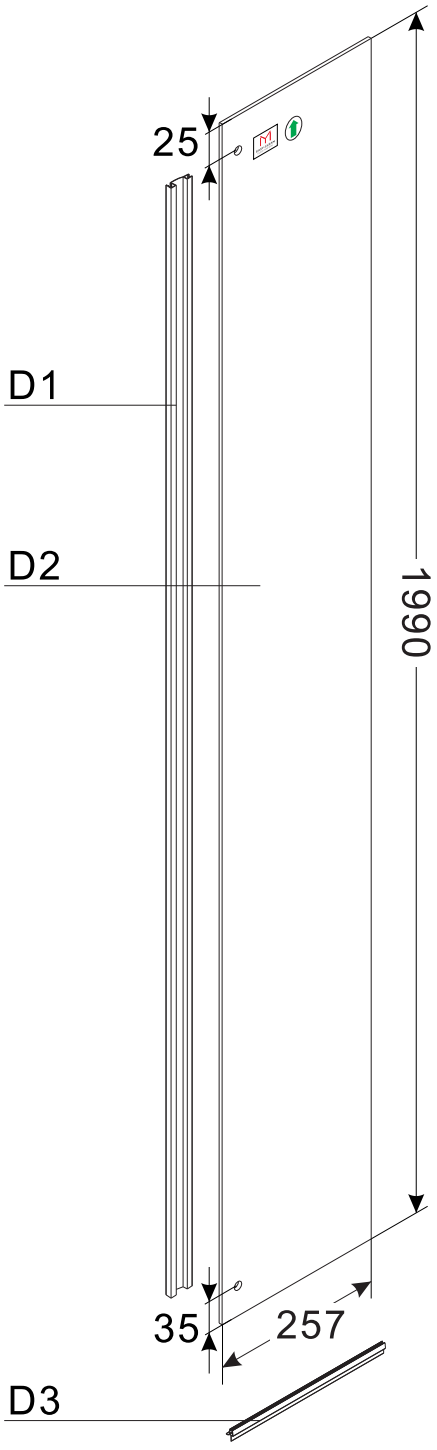

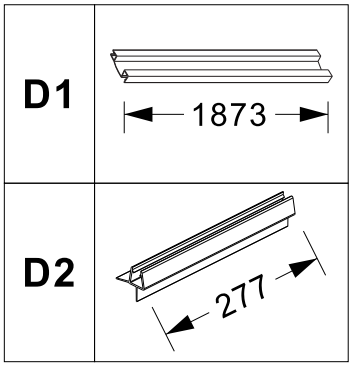

THIS DIRECTION
FOR TOP SIDE.

(D1) 1x Seal

(D2) 1x Flipper Panel

(D3) 1x Bottom Seal

STEP 1 TRAY TO BE LEVEL

MAKE SURE THE TRAY IS LEVEL, USING A SPIRIT LEVEL, BEFORE INSTALLING THIS SHOWER PANE/DOOR, AND THAT SILICONE IS APPLIED ON ALL SIDES WHERE THE TRAY MEETS THE TILES / WET WALL PANELS

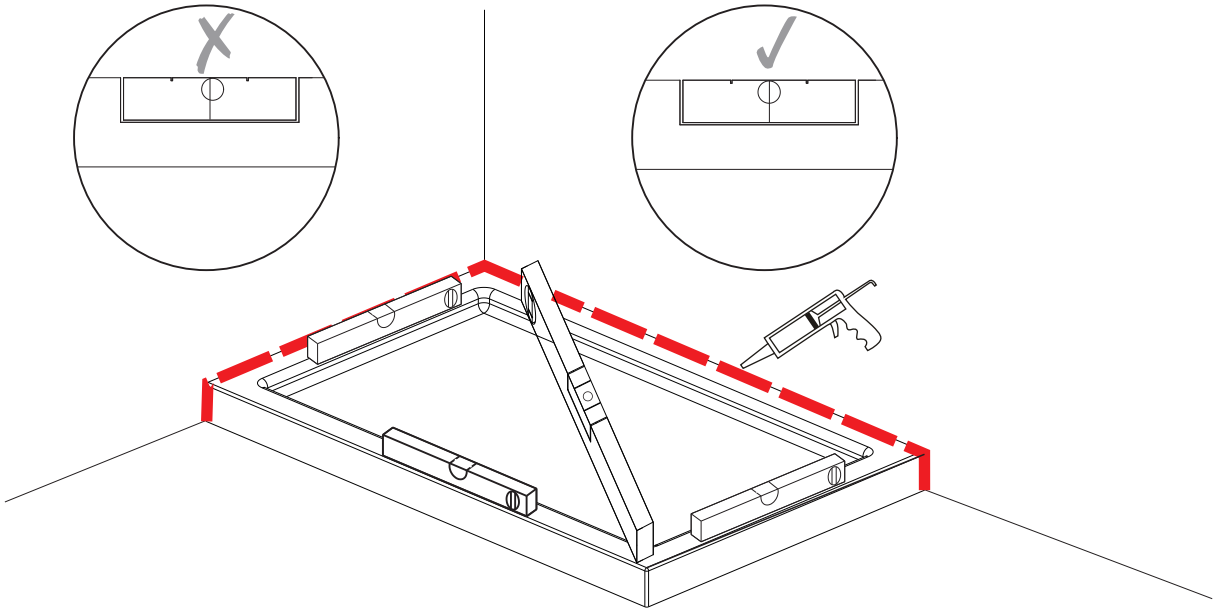

STEP 2

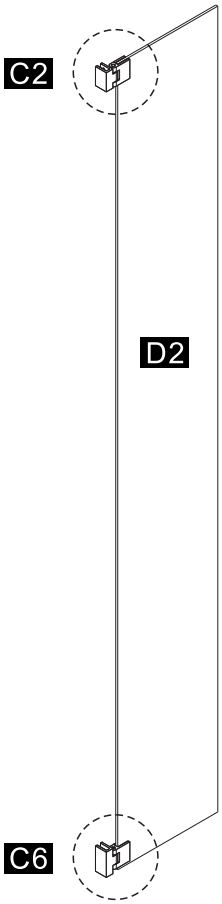

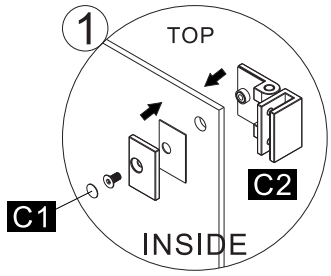

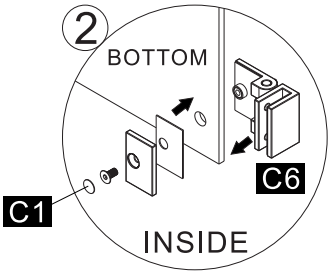

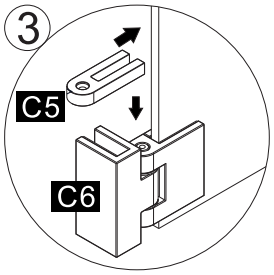

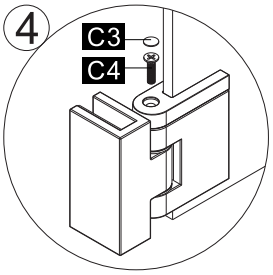

STEP 3

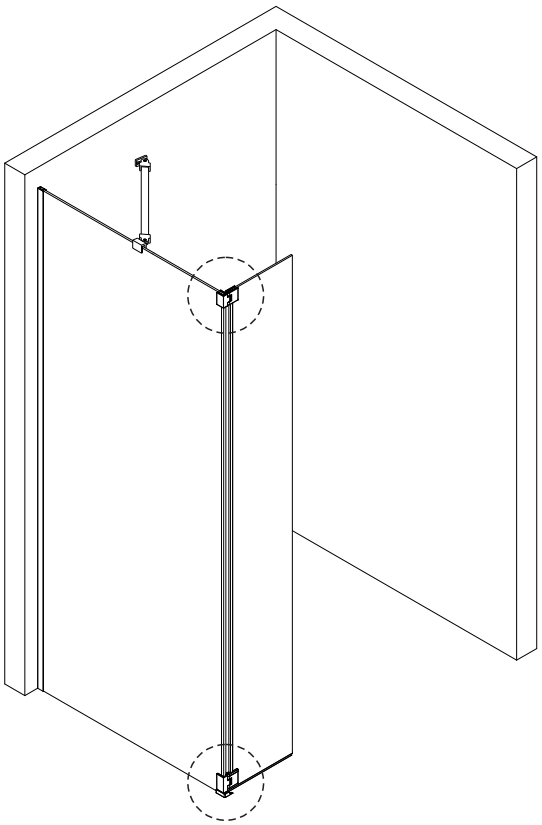

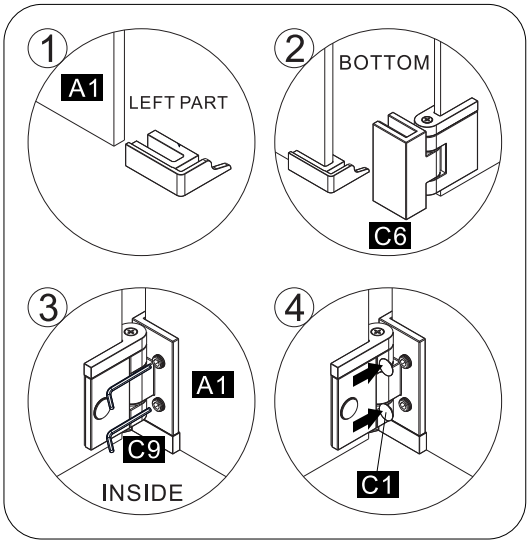
1
A1
LEFT PART
2
BOTTOM
C6
3
A1
C9
INSIDE
4
C1

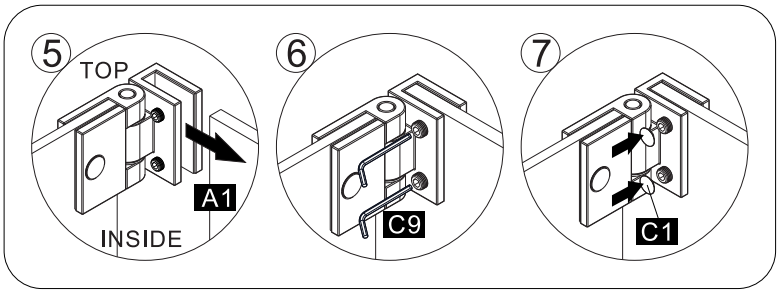
5
TOP
A1
INSIDE
6
C9
7
C1

STEP 4

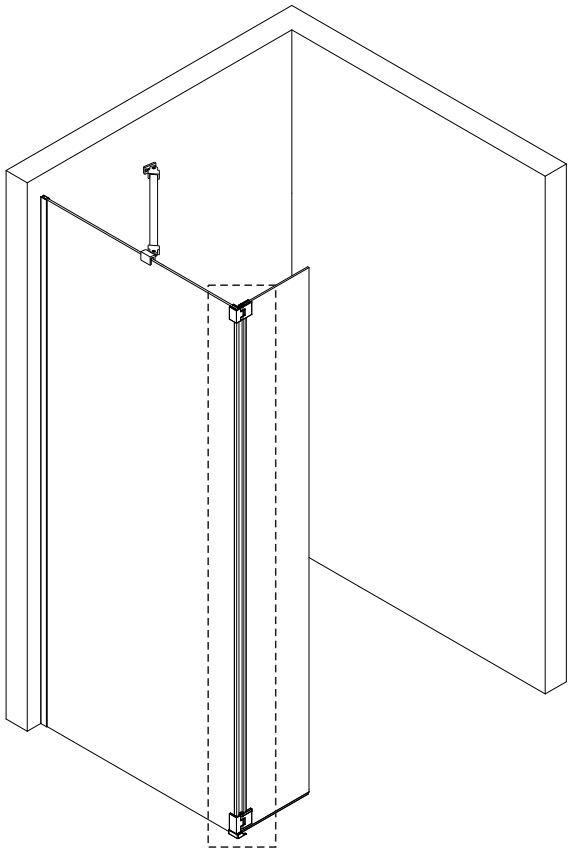

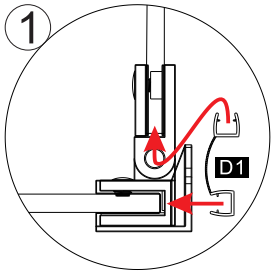
1
D1

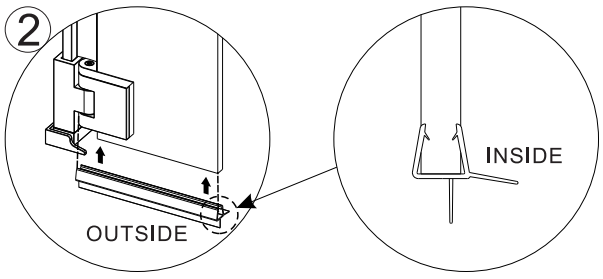
2
OUTSIDE
INSIDE

STEP 5

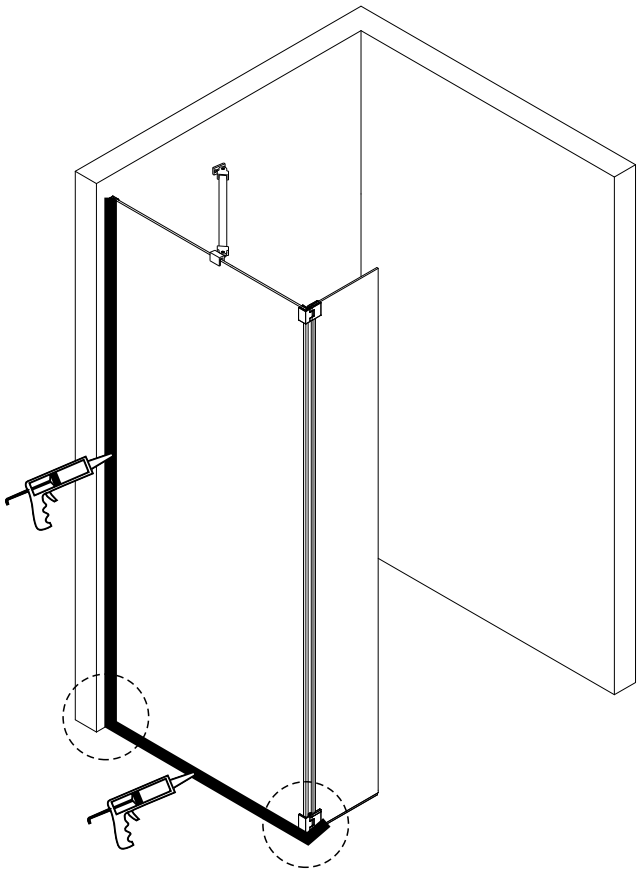

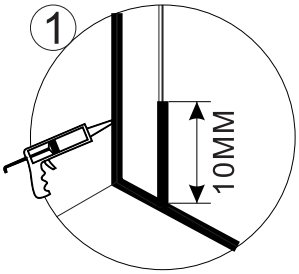

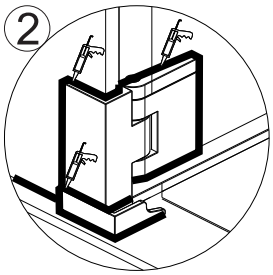

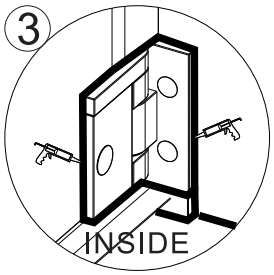

Allow 24 hours for silicone to dry before use. Silicone on the outside edge only